

1. Connect to the modem via Wire or Wireless
2. Open a browser (Chrome, Firefox, Safari, etc.) and enter 192.168.1.1 in the address bar
3. Enter **admin** for both the username and password
4. Using the left-hand navigation panel, click **WAN** and match the below settings before clicking **Apply**

ASUS ZenWiFi AX | Logout | Reboot | English ▾

Quick Internet Setup | General | Network Map | AiMesh | Guest Network | AiProtection | Adaptive QoS | Traffic Analyzer | USB Application | AiCloud 2.0 | Advanced Settings | Wireless | LAN | **WAN** | Alexa & IFTTT | IPv6 | VPN | Firewall | Administration | System Log | Network Tools

Operation Mode: **Wireless router** Firmware Version: **9.0.0.4.386_9794**
 SSID: **ASUS_XT8_631CDE082A1F54C...**
App

Internet Connection | Dual WAN | Port Trigger | Virtual Server / Port Forwarding | DMZ | DDNS | NAT Passthrough

WAN - Internet Connection

RT-AX95Q supports several connection types to WAN (wide area network). These types are selected from the dropdown menu beside WAN Connection Type. The setting fields differ depending on the connection type you selected.

Configure the Ethernet WAN settings of RT-AX95Q.

Basic Config	
WAN Connection Type	Automatic IP <input style="width: 20px; height: 15px; border: 1px solid black;" type="button" value="..."/>
Enable WAN	<input type="radio"/> Yes <input checked="" type="radio"/> No
Enable NAT	<input type="radio"/> Yes <input checked="" type="radio"/> No
Enable UPnP <small>UPnP FAQ</small>	<input type="radio"/> Yes <input checked="" type="radio"/> No
WAN DNS Setting	
Connect to DNS Server automatically	<input type="radio"/> Yes <input checked="" type="radio"/> No
Account Settings	
Authentication	<input style="width: 100px; height: 25px; border: 1px solid black;" type="button" value="None"/>
Special Requirement from ISP	
Host Name	<input type="text"/>
MAC Address	<input type="text"/> <input style="width: 100px; height: 25px; border: 1px solid black;" type="button" value="MAC Clone"/>
DHCP query frequency	Aggressive Mode <input style="width: 20px; height: 15px; border: 1px solid black;" type="button" value="..."/>
Extend the TTL value	<input checked="" type="radio"/> Yes <input type="radio"/> No
Spoof LAN TTL value	<input checked="" type="radio"/> Yes <input type="radio"/> No
<input style="width: 100px; height: 30px; background-color: black; color: white; border: 1px solid black;" type="button" value="Apply"/>	

[Help & Support](#) | [Manual](#) | [Utility](#) | [Product Registration](#) | [Feedback](#) | [FAQ](#) |

5. Using the left-hand navigation panel, click **LAN** and then the **IPTV** tab above
6. Match the below settings and click **Apply**

ASUS ZenWiFi AX

Logout Reboot English

Quick Internet Setup

Operation Mode: **Wireless router** Firmware Version: **9.0.0.4.386_9794**
SSID: **ASUS_XT8_631CDE082A1F54C...**

App

General Network Map AiMesh Guest Network AiProtection Adaptive QoS Traffic Analyzer USB Application AiCloud 2.0 Advanced Settings Wireless **LAN** WAN Alexa & IFTTT IPv6 VPN Firewall Administration System Log Network Tools

LAN IP DHCP Server Route **IPTV** Switch Control

LAN - IPTV

To watch IPTV, the WAN port must be connected to the Internet. Please go to [WAN - Dual WAN](#) to confirm that WAN port is assigned to primary WAN.

LAN Port

Select ISP Profile	Manual Setting
Internet	VID <input type="text" value="10"/> PRIO <input type="text" value="0"/>
LAN Port 3	VID <input type="text"/> PRIO <input type="text" value="0"/>
LAN Port 2	VID <input type="text"/> PRIO <input type="text" value="0"/>

Special Applications

Use DHCP routes	Microsoft
Enable multicast routing	Disable
UDP Proxy (Udpxy)	0

Apply

Help & Support [Manual](#) | [Utility](#) | [Product Registration](#) | [Feedback](#) FAQ