


1. Connect to the modem via Wire or Wireless
2. Open a browser (Chrome, Firefox, Safari, etc) and enter 192.168.20.1 in the address bar
3. Enter **admin** as both the username and password
4. Using the left-hand panel, click **Basic Setup**

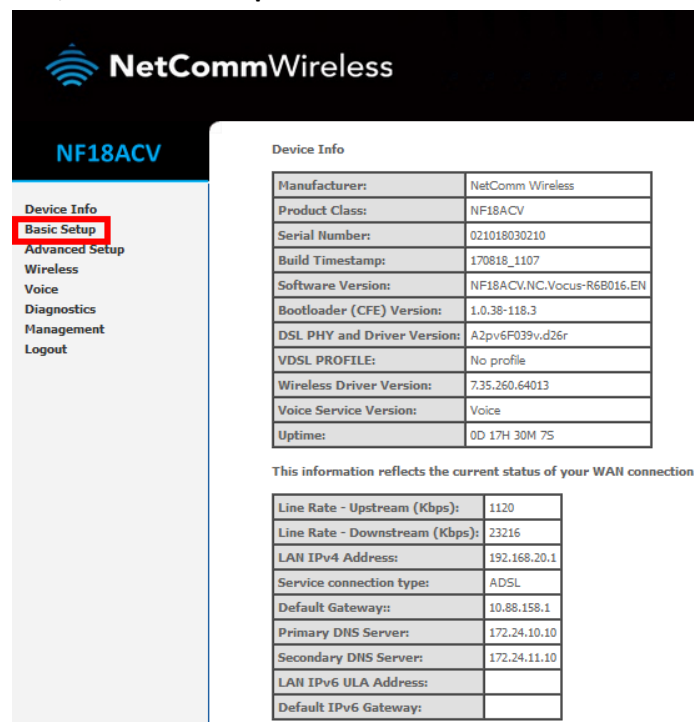


The screenshot shows the NetCommWireless NF18ACV web interface. The left sidebar has a menu with 'Basic Setup' highlighted in red. The main content area displays 'Device Info' with a table of system details.

Device Info	
Manufacturer:	NetComm Wireless
Product Class:	NF18ACV
Serial Number:	021018030210
Build Timestamp:	170818_1107
Software Version:	NF18ACV.NC.Vocus-R68016.EN
Bootloader (CFE) Version:	1.0.38-118.3
DSL PHY and Driver Version:	A2pv6F039v.d26r
VDSL PROFILE:	No profile
Wireless Driver Version:	7.35.260.64013
Voice Service Version:	Voice
Uptime:	0D 17H 30M 7S

Below the table, it states: 'This information reflects the current status of your WAN connection.'


Line Rate - Upstream (Kbps):	1120
Line Rate - Downstream (Kbps):	23216
LAN IPv4 Address:	192.168.20.1
Service connection type:	ADSL
Default Gateway:	10.88.158.1
Primary DNS Server:	172.24.10.10
Secondary DNS Server:	172.24.11.10
LAN IPv6 ULA Address:	
Default IPv6 Gateway:	

5. Select **ADSL** and click **Next**

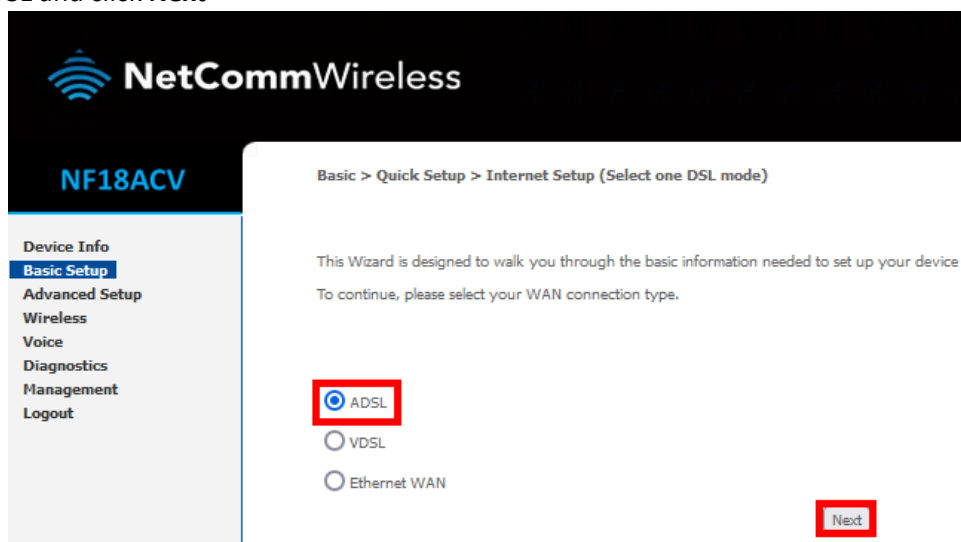

The screenshot shows the 'Basic Setup' page, specifically the 'Internet Setup (Select one DSL mode)' section. The left sidebar has 'Basic Setup' highlighted. The main content area has a heading 'Basic > Quick Setup > Internet Setup (Select one DSL mode)'. Below the heading, it says 'This Wizard is designed to walk you through the basic information needed to set up your device. To continue, please select your WAN connection type.' There are three radio button options: 'ADSL' (selected and highlighted with a red box), 'VDSL', and 'Ethernet WAN'. A 'Next' button is located at the bottom right, also highlighted with a red box.


6. Select **PPPoA** and click **Next**

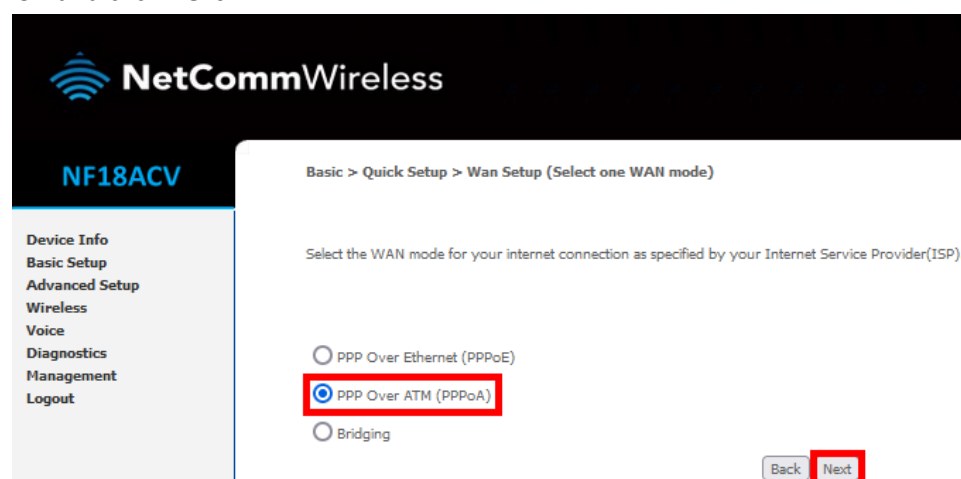

The screenshot shows the 'Basic Setup' page, specifically the 'Wan Setup (Select one WAN mode)' section. The left sidebar has 'Basic Setup' highlighted. The main content area has a heading 'Basic > Quick Setup > Wan Setup (Select one WAN mode)'. Below the heading, it says 'Select the WAN mode for your internet connection as specified by your Internet Service Provider(ISP)'. There are three radio button options: 'PPP Over Ethernet (PPPoE)', 'PPP Over ATM (PPPoA)' (selected and highlighted with a red box), and 'Bridging'. At the bottom right, there are 'Back' and 'Next' buttons, with the 'Next' button highlighted with a red box.

7. Enter the following details:

- User ID: user@contactenergy.co.nz
- Password: **C0nt4ct-3n3rgy!**
- VPI: **0**
- VCI: **100**

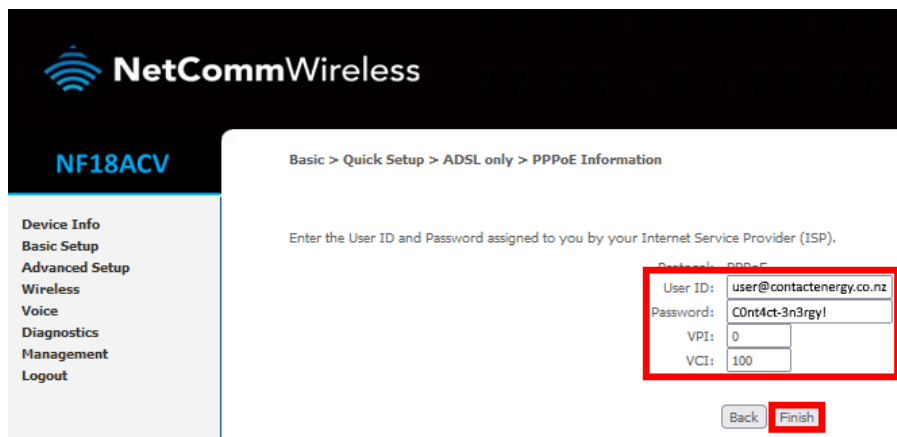

The image shows a web-based configuration interface for a NetCommWireless NF18ACV device. The interface has a dark header with the NetCommWireless logo and a sidebar on the left with navigation links: Device Info, Basic Setup, Advanced Setup, Wireless, Voice, Diagnostics, Management, and Logout. The main content area is titled 'Basic > Quick Setup > ADSL only > PPPoE Information'. It instructs the user to 'Enter the User ID and Password assigned to you by your Internet Service Provider (ISP)'. Below this, there is a form with the following fields: 'Protocol' (set to PPPoE), 'User ID' (set to user@contactenergy.co.nz), 'Password' (set to C0nt4ct-3n3rgy!), 'VPI' (set to 0), and 'VCI' (set to 100). At the bottom of the form are 'Back' and 'Finish' buttons. A red rectangle highlights the User ID, Password, VPI, and VCI fields.

NetCommWireless

NF18ACV

Basic > Quick Setup > ADSL only > PPPoE Information

Enter the User ID and Password assigned to you by your Internet Service Provider (ISP).

Protocol: PPPoE

User ID: user@contactenergy.co.nz

Password: C0nt4ct-3n3rgy!

VPI: 0

VCI: 100

Back Finish

8. Click **Finish**