

1. Connect to the modem via Wire or Wireless
2. Open a Browser (Chrome, Firefox, etc.) and enter **192.168.20.1** in the address bar
3. Enter **admin** as both the Username and the Password
4. Using the left-hand panel, click **Basic Setup**

**NetComm Wireless**  
NF4V

Device Info

- Device Info
- Basic Setup**
- Advanced Setup
- Wireless
- Voice
- Diagnostics
- Management

Manufacturer:	NetComm Wireless
Product Class:	NF4V
Serial Number:	130917000001
Build Timestamp:	201309161102
Software Version:	GURNV5.OT132A-8-NC.AU-R5B014.EN
Bootloader (CFE) Version:	1.0.38-114.170
DSL PHY and Driver Version:	A2pv6F039d.d24l
Wireless Driver Version:	6.30.163.23.cpe4.12L
Voice Service Version:	V2.4
Uptime:	0D 0H 10M 4S

This information reflects the current status of your WAN connection.

Line Rate - Upstream (Kbps):	0
Line Rate - Downstream (Kbps):	0
LAN IPv4 Address:	192.168.20.1
Default Gateway:	
Primary DNS Server:	0.0.0.0
Secondary DNS Server:	0.0.0.0
LAN IPv6 Address:	
Default IPv6 Gateway:	
Date/Time:	Sat Nov 19 00:09:55 2011

5. Select **ADSL** then click **Next**

**NetComm Wireless**  
NF4V

Basic > Quick Setup > Internet Setup (Select one DSL mode)

This Wizard is designed to walk you through the basic information needed to set up your device  
To continue, please select your WAN connection type.

**ADSL**

VDSL

**Next**

6. Make sure the following settings are in place and then click **Finish**

**NetComm Wireless**  
NF4V

Basic > Quick Setup > ADSL only > PPPoA Information

Enter the User ID and Password assigned to you by your Internet Service Provider (ISP).

Protocol: PPPoA

User ID:	user@contactenergy.co.nz
Password:	Cont4ct-3n3rgy!
VPI:	0
VCI:	100

**Back** **Finish**