- 1. Connect a device to the modem via Wire or Wireless
- 2. Open a browser (Chrome, Firefox, Safari, etc)
- 3. Enter <u>192.168.1.1</u> in the address bar (you can click the numbers on this document and this should open for you)
- 4. Enter admin for the User Name and @HuaweiHgw for the Password and click Log In
- 5. On the left-hand side, click Advanced Configuration



6. Click on WAN Configuration and then click the New button

	WAN Configuration		
	LAN Configuration	~	
+	Security Configura		
A	Route	~	
¢ (Forward Rules	~	
	Application	~	
	WLAN	~	
	Voice	~	
	System Management	~	
	Maintenance Diagno	~	

WAN Configuration

On this page, you can configure WAN port parameters. A home gateway communicates with an upper-layer device through the WAN port. During the communication, WAN port parameters must be consistent with upper-layer device parameters.

N	ew Delete		
	Connection Name	VLAN/Priority	Protocol Type
	1_TR069_VOIP_INTERNET_R_GE_VID_10	10/0	IPv4/IPv6
	2_TR069_VOIP_INTERNET_R_ADSL_0/110_VID_10	10/0	IPv4/IPv6
	3_TR069_VOIP_INTERNET_R_VDSL_VID_10	10/0	IPv4/IPv6

7. Make sure the following settings match and then click **Apply**

WLAN	~				
Voice		Basic Information			
Voice	Ť	Enable WAN:	\checkmark		
System Management	~	Access Type:	GE upstream		
Maintenance Diagno	. ~	Encapsulation Mode:	● IPoe ○ PPPoe		
-		Protocol Type:	IPv4 ~		
		WAN Mode:	Route WAN ~		
		Service Type:	INTERNET ~		
		Enable VLAN:			
		VLAN ID:	10 *(1-4094)		
		802.1p Policy:	Use the specified valu \sim		
		802.1p:	0 ~		
		MTU:	(1-1540)		
		Binding Options:	LAN1 LAN2 LAN3 LAN4 SSID1 SSID2 SSID3 SSID4 SSID4 SSID8	ssid5 sside	SSID7
		IPv4 Information			
		IP Acquisition Mode:	○ Static		
		Enable NAT:			
		NAT type:	Full cone NAT 🛛 🗸		
		Vendor ID:	(consists of 0–6	4 characters.)	
		User ID:	(option 61; con	sists of 0-64 char	acters.)
			Apply Cancel		

8. You should now be connected to the Internet