- 1. Connect to the modem via Wire or Wireless
- 2. Open a browser (Chrome, Firefox, Safari, etc.) and enter <u>192.168.1.1</u> in the address bar
- 3. Enter admin for both the username and password
- 4. Using the left-hand navigation panel, click **WAN** and then **Dual WAN** up above. Make sure the following settings are in place and click **Apply**



- 5. Using the top navigation panel, click Internet Connection
- 6. Match the below settings and click **Apply**

/ISUS	DSL-AC68U	Logout		Reboot					English	*
tyst Quick I	nternet	Firmware Version: 3.0.0.4.380_3034 SSID: ASUS ASUS 5G						9 8 O C	: :	
Setup	In	ternet Connection	Dual WAN Po	ort Trigger	Virtual Ser	ver / Port Forward	ing DMZ	DDNS	NAT Passthrough	
Gene	eral									
Retwork Map		WAN - Internet Connection								
🔏 Guest N	letwork b	DSL-AC68U supports several connection types to WAN (wide area network). These types are selected from the dropdown menu beside WAN Connection Type. The setting fields differ depending on the connection type you selected.								
f AiProte	ction	Configure the Ethernet WAN settings of DSL-AC68U.								
~		Basic Config	_	_		_	_		_	
Adaptiv	re QoS	WAN Connection Typ	e	Au	tomatic I	P~↓				
Traffic /	Analyzer	Enable WAN		•	Yes 🔍 No					
🗼 USB Ap	plication	Enable NAT		•	Yes 🔍 No					
AiCloud	2.0	Enable UPnP <u>UPn</u>	P FAQ	•	Yes 🔍 No					
		802.1Q								
Advanced Settings		Enable		•	O Yes D No					
察 Wireles	s ,	VLAN ID		10	1~4	1094)				
🚮 LAN		802.1P		0	0~7	')				
💮 wan		WAN DNS Setting								
		Connect to DNS Serv	er automatically	•	Yes 🔍 No					
		Account Settings								
VPN		Authentication		No	ne	4				
Firewal		Special Requirement from ISP								
& Admini	stration	Host Name								
System	Log	MAC Address					MAC C	lone		
	k Teols	DHCP query frequency		Ag	Aggressive Mode 🗸					
	k Tools	Extend the TTL value			Yes O No					
					A	pply				