


1. Connect to the modem via wire or wireless
2. Open a browser (Chrome, Firefox, Safari, etc) and enter 192.168.178.1 in the address bar
3. When prompted, add **admin** as the username and look on the bottom of the modem for the **Fritzbox Password**, if there is no **Fritzbox Password** try **admin**
4. Using the left-hand panel, navigate to **Internet > Account Information**

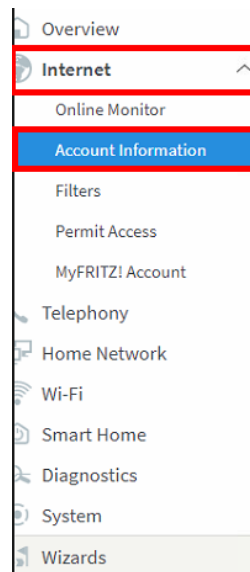

5. Match the following details

On this page you can configure the data of your internet connection, and adjust the connection if needed.

Internet Service Provider

Select your internet service provider.

Internet service provider other internet service provider

Name

Connect via

Specify how the internet connection should be established.

☐ Connection to a DSL line
Select this kind of connection when the FRITZ!Box is connected to your DSL line using the DSL cable. The DSL modem integrated in the FRITZ!Box is used for the internet connection.

☐ Connecting to a cable modem (cable connection)
Select this kind of connection if the "LAN 1" port of the FRITZ!Box is to be connected to a cable modem that establishes the internet connection.

☒ Connection to an external modem or router
Select this kind of connection if the "LAN 1" port of the FRITZ!Box is connected to an already existing external modem or router.

Operating Mode

Specify whether the FRITZ!Box connects to the internet itself or shares an existing internet connection.

☒ Establish own connection to the internet
The FRITZ!Box disposes over its own IP address range. The firewall remains enabled.

☐ Share existing internet connection in the network (Mesh Wi-Fi / IP client mode)
The FRITZ!Box becomes part of the existing home network and takes over this IP address range. The firewall of the FRITZ!Box is disabled. If the other router that spans the home network FRITZ!Box can become part of the Mesh Wi-Fi.

Account Information

Is account information required?

☒ No

Connection Settings

The connection settings are already set to the most frequently used values. You can change these values if needed.

Data Throughput

Enter the speed of your line. These values are required to secure the prioritization of the network devices.

Downstream 1000 Mbit/s

Upstream 1000 Mbit/s

Change Connection Settings

VLAN Settings

Please note that a VLAN ID is required only in special cases. The required ID was supplied by your internet service provider.

☒ Use VLAN for internet access

VLAN-ID 10

PBit 0

IP Settings

☒ Obtain the IP address automatically (DHCP)

DHCP host name fritz.box

☐ Configure the IP address manually

IP address 0 0 0 0

Subnet mask 0 0 0 0

Default gateway 0 0 0 0

Primary DNS server 0 0 0 0

Secondary DNS server 0 0 0 0

6. Scroll to the bottom and click **Apply**