- 1. Connect to your modem via Wire or Wireless
- 2. Open a browser (Chrome, Firefox, Safari, etc.) and enter 192.168.20.1 in the address bar
- 3. Enter admin as both the username and password and login
- 4. Click the Advanced link down below



5. Select **Network Setup > Network Setup** along the top ribbon

NB16WV - ADSL2+ Wireless N Modern Router

		with Vo	IP	Switch to VOIP/INAS View	
	_				
Status	Network Setup	Forwarding Rules	♦Security Settings	Advanced Settings	►Toolbox
	Network Setup				
	DHCP Server				
📈 IPv4 System	Wireless				
	Change Password		WAN Status		Sidenote
IP Address			0.0.0.0		Dynamic IP
Subnet Mask			0.0.0.0		
	Gateway		0.0.0.0		
Doma	in Name Server		0.0.0.0, 0.0.0.0		

Switch to basic view

6. Match the following settings then click Save

Status	Network Setup	Forwarding Rules	Security Settings	►Advanced Settings	VoIP Settings	►NAS Settings	Toolbox
	Item				Setting		
WAN Interface			Ethernet WAN	✓ O Active O Ir	nactive		
WAN Type			Dynamic IP Ad	ddress 🗸			
Remote Host for	keep alive]		
Host Name				(option	nal)		
ISP registered M	AC Address			Clone			
NAT			Enable				
Multicast			Disable 🗸				
IGMP Snooping			Enable				
VLAN TAG			Enable 10	(range: 1~4094)			
			Save	Undo			