


1. Connect to the modem via Wire or Wireless
2. Open a browser (Chrome, Firefox, Safari, etc.) and enter **192.168.1.1** in the address bar
3. Enter **!!Huawei** as the username and **@HuaweiHgw** for the password
4. Click **Internet** from the top ribbon

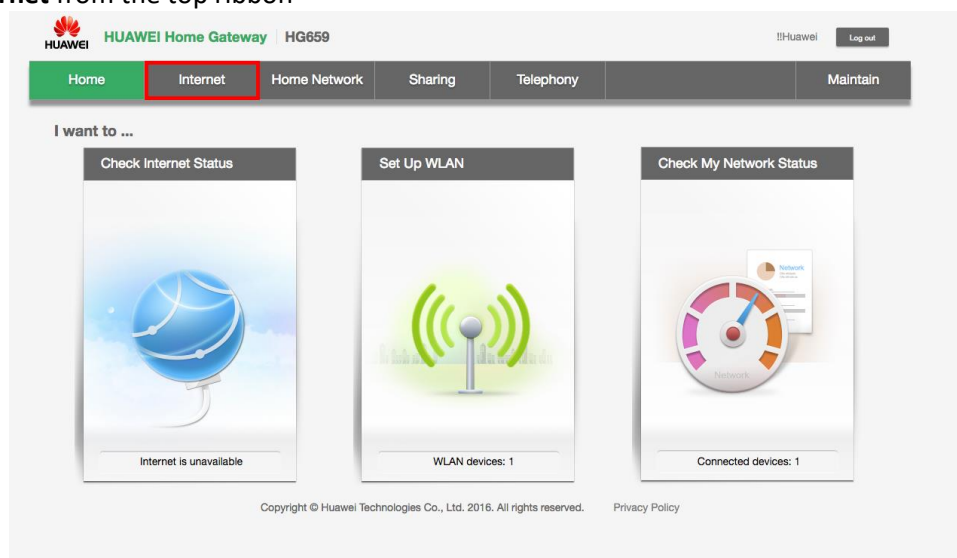

5. On the left-hand side, click **Internet Settings**
6. Find the entry that has **ETH_VID** in it's name
7. Make sure the following settings are in place and click **Save**

Internet_Ethernet

Access type:	Ethernet
IPv4 status:	Connected
IPv4 address:	100.65.51.87
IPv4 primary DNS server:	8.8.8.8
IPv4 secondary DNS server:	8.8.4.4
IPv4 default gateway:	100.65.0.1
<input type="button" value="Delete"/> <input type="button" value="Edit"/>	

Basic Information

Enable connection:	<input checked="" type="checkbox"/>
Name:	Internet_Ethernet
Service type:	<input checked="" type="checkbox"/> INTERNET <input type="checkbox"/> TR069 <input checked="" type="checkbox"/> VOICE <input type="checkbox"/> Other
Connection type:	IP routing (IP) ▼
MTU:	1500
MSS:	0
NAT type:	NAPT ▼

Link Information

Enable VLAN:	<input checked="" type="checkbox"/>
VLAN ID:	10
802.1p:	0

IP Information

IP protocol version:	IPv4 ▼
IPv4 addressing type:	DHCP ▼
Static DNS:	<input checked="" type="checkbox"/>
IPv4 primary DNS server:	8 . 8 . 8 . 8
IPv4 secondary DNS server:	8 . 8 . 4 . 4