



1. Connect to the modem by Wire or Wireless
2. Open a browser (Chrome, Firefox, etc.) and enter **192.168.1.254** in the address bar
3. Enter **!!Huawei** for the username and **@HuaweiHgw** as the password
4. Along the top ribbon, click **Internet**

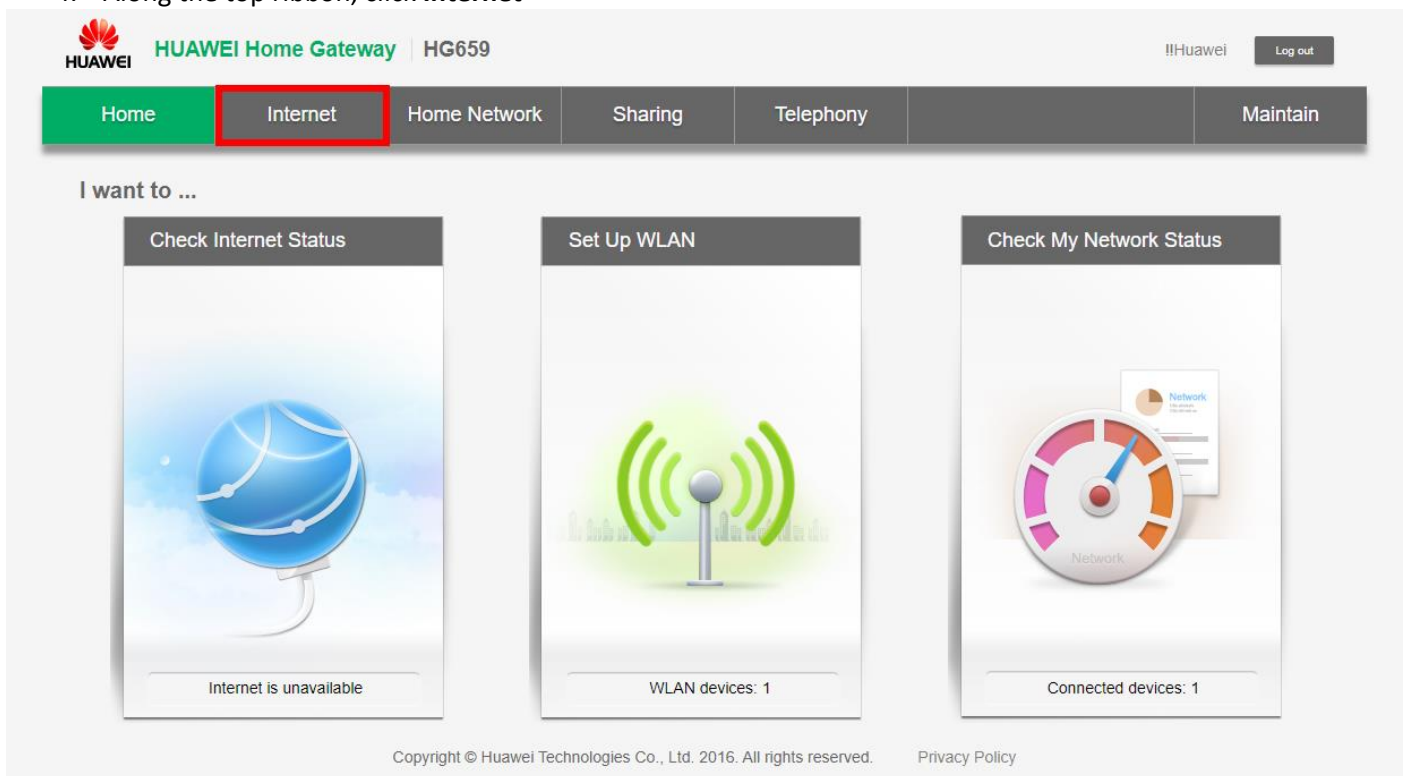

5. On the left-hand side, make sure **Internet Settings** is highlighted, look for a heading on the right-hand side with **ETH_VID** in its name and click **Edit**

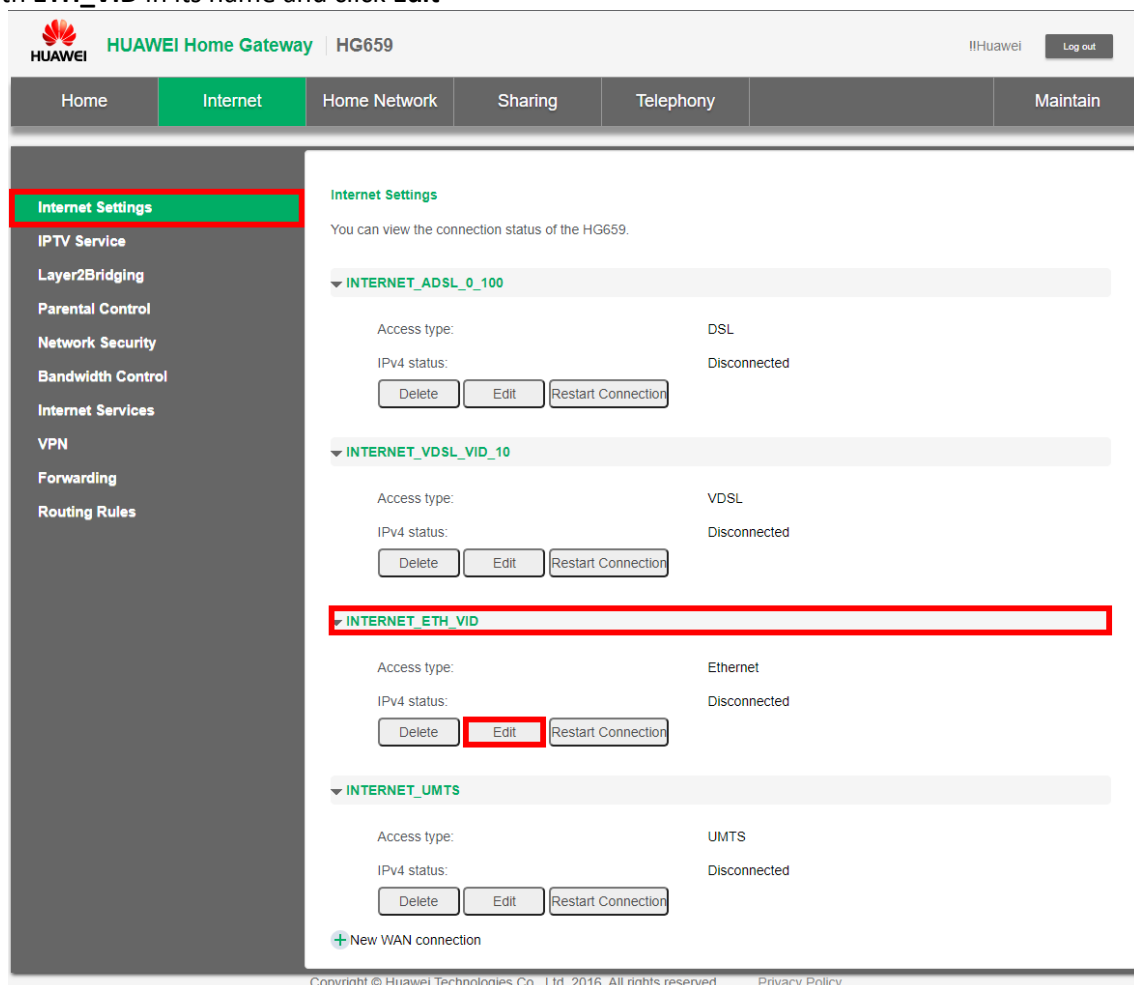

6. Make sure the following settings are in place and click **Save**

INTERNET_ETH_VID

Access type:

Ethernet

IPv4 status:

Disconnected

Delete

Edit

Basic Information

Enable connection:

☒

Name:

INTERNET_ETH_VID

Service type:

☒ INTERNET ☒ VOICE ☐ Other

Connection type:

IP routing (IP)

MTU:

1500

MSS:

0

NAT type:

NAPT

Link Information

Enable VLAN:

☒

VLAN ID:

10

802.1p:

0

IP Information

IP protocol version:

IPv4

IPv4 addressing type:

DHCP

Static DNS:

☒

IPv4 primary DNS server:

8 . 8 . 8 . 8

IPv4 secondary DNS server:

8 . 8 . 4 . 4

Cancel

Save