- 1. Connect to the modem by Wire or Wireless
- 2. Open a browser (Chrome, Firefox, etc) and enter 192.168.1.254 in the address bar
- 3. Use admin as both the Username and the Password
- 4. The password must be changed, minimum of 8 characters long, then click Save
- 5. On the left-hand side, click **Network**
- 6. On the top of this page, click on WAN
- 7. Make sure the WAN Connection Type is set to Ethernet WAN
- 8. Click the first Edit button in the Summary page

Spark ¹²	LAN - WA	N LTE Conf	īg LTE Status	Firewall - Dyna	mic DNS NAT -	QoS -	English Routing -	IPv6					
Overview	Network > WAN												
Network	WAN Ty	pe	Ethernet WAN	(Active)									
WLAN	Sum	nary											
USB	Statu	s 802.10	Enable VL/	AN ID Protocol	Internet	IPTV Vo	P Edit PVC						
Administration	Enab	led Yes	10	Automatic IF	×		Edit						
	Disat	led No		-			Edit						
	Disat	oled No		-		*	Edit						
	Disat	led No		-			Edit						

9. Make sure the settings on this page match the settings in red below, then click Save settings

Sporkez					Englis	sh 💙 Logout						
Spark												
	LAN - WAN LTE Config	LTE Status Firewall -	Dynamic DNS	NAT+ Q	oS∓ Routing∓	IPv6						
Overview	Network > WAN											
Network	WAN Type	Ethernet WAN	Active)									
WLAN	PVC Setting											
USB	Service Type											
Administration	WAN Connection Type	Automatic IP	¥.									
	Enable WAN	Yes No										
	Default Route	WAN 1	×									
	802 1g											
	Enable	• Yes No										
	VLAN ID	10 1 -4095										
	-											
	WAN DNS Setting											
	Connect to DNS Server automatically	Yes No										
	MAC Address CC:D4:2E:27:DE:9A MAC Clone											
		Save settings	Cancel	_								