



1. Connect to the modem via Wire or Wireless
2. Open a browser (Chrome, Firefox, Safari, etc.) and enter 192.168.1.1 into the address bar
3. Enter **Admin** as the username and **@[last 8 digits of modem S/N]** e.g. @12345678
4. Click Login
5. Click the **Internet** tab up above

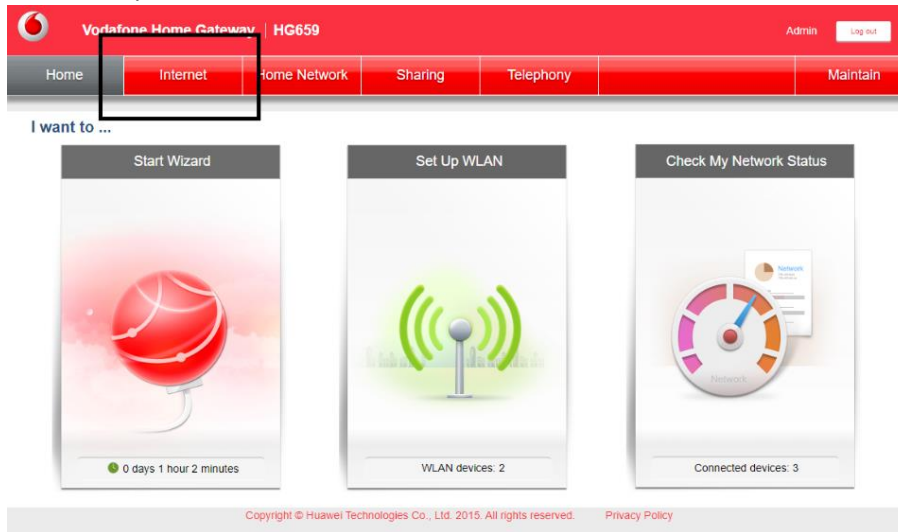

6. Locate the service listed as **Internet_Ethernet** and click **Edit**

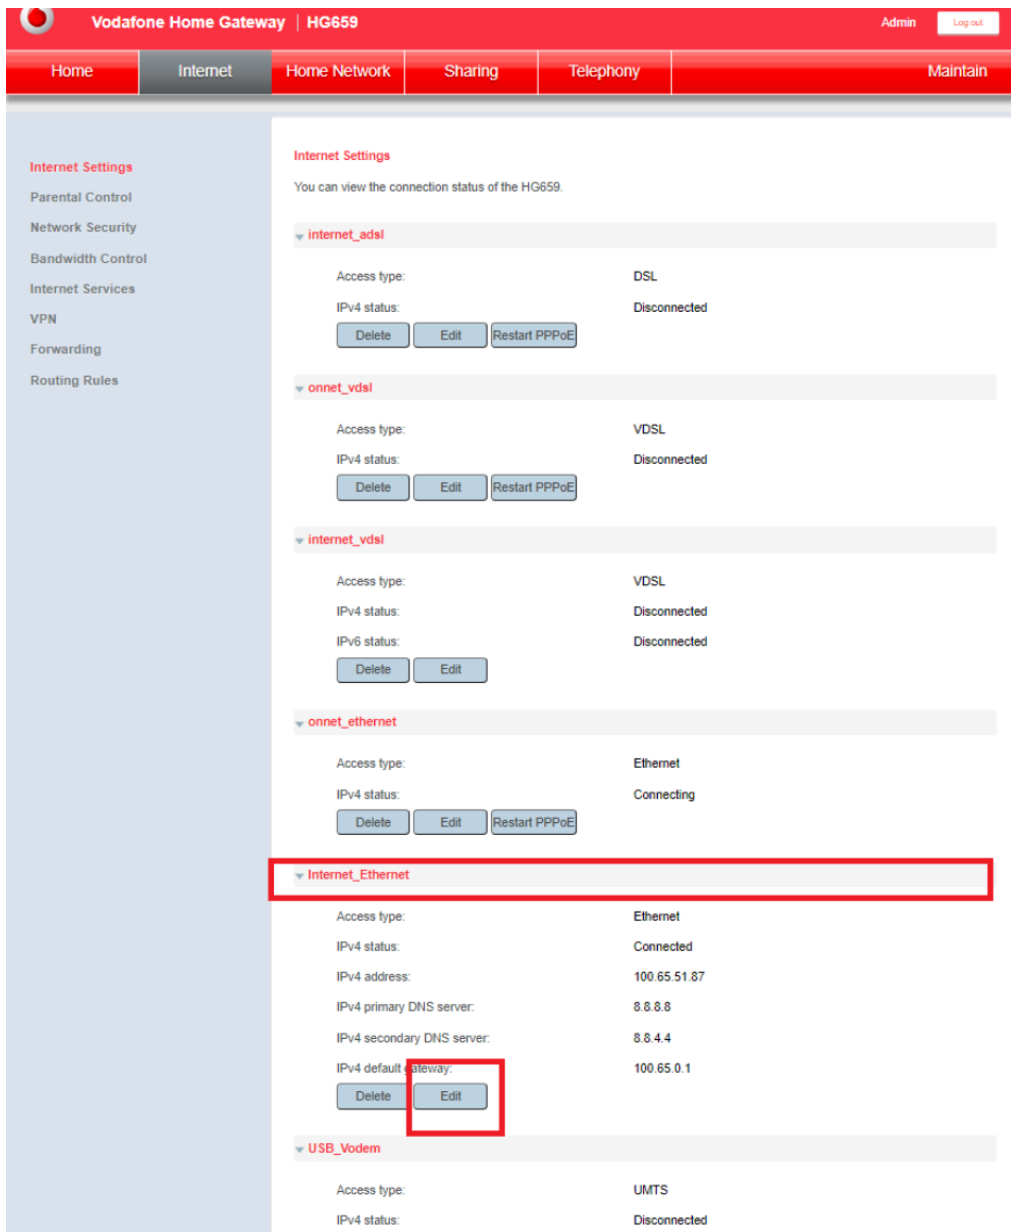

7. Match the following settings and then click **Save**

▼ **Internet_Ethernet**

Access type: Ethernet
IPv4 status: Connected
IPv4 address: 100.65.51.87
IPv4 primary DNS server: 8.8.8.8
IPv4 secondary DNS server: 8.8.4.4
IPv4 default gateway: 100.65.0.1

Delete

Edit

Basic Information

Enable connection:
Name:
Service type: INTERNET TR069 VOICE Other
Connection type:
MTU:
MSS:
NAT type:

Link Information

Enable VLAN:
VLAN ID:
802.1p:

IP Information

IP protocol version:
IPv4 addressing type:
Static DNS:
IPv4 primary DNS server:
IPv4 secondary DNS server:

Cancel

Save