



1. Connect to the modem via Wire or Wireless
2. Open a browser (Chrome, Firefox, Safari, etc.) and enter 192.168.1.1 in the address bar
3. Enter **admin** as the username and **@HuaweiHgw** as the password
4. On the left-hand side click **Advanced Configuration**

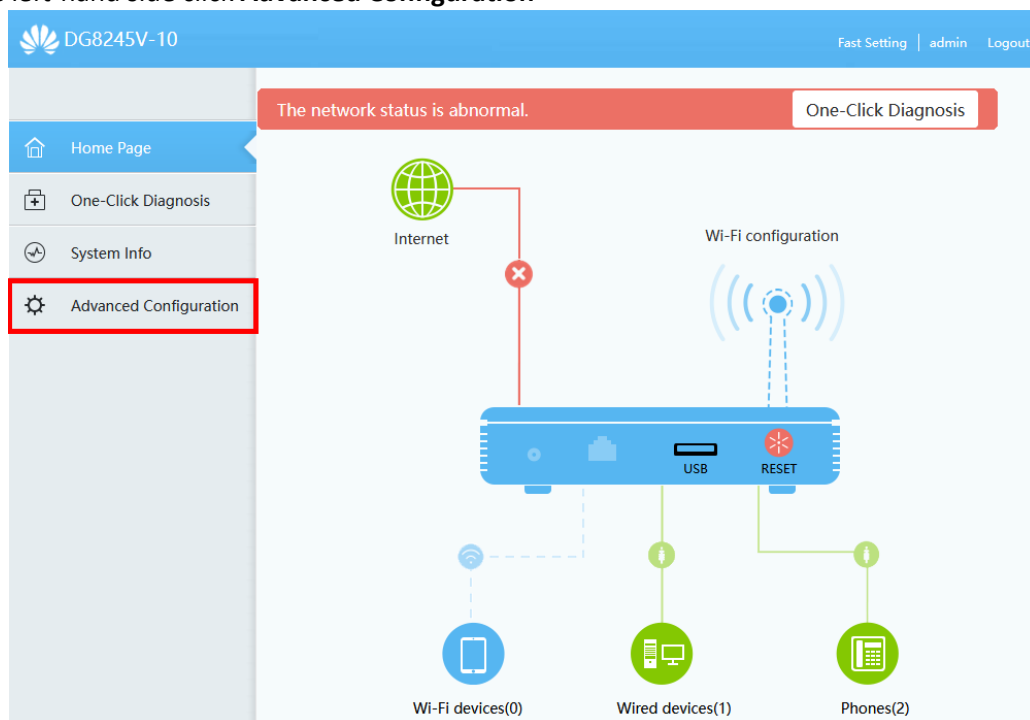

5. On the left-hand side click **WAN Configuration** and then click **New**

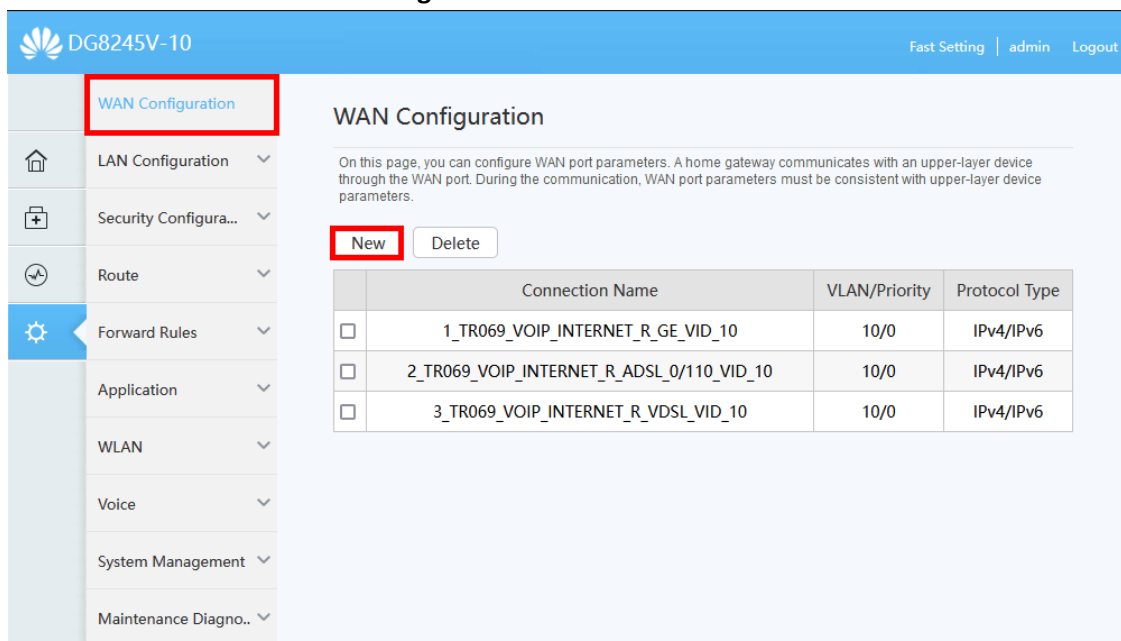

6. Make sure the settings match below and click **Save**

Basic Information

Enable WAN:

☒

Access Type:

ATM upstream

Encapsulation Mode:

☐ IPoE ☒ PPPoE

Protocol Type:

IPv4

WAN Mode:

Route WAN

Service Type:

INTERNET

Enable VLAN:

☒

VLAN ID:

10

*(1-4094)

802.1p Policy:

Use the specified val

802.1p:

0

MRU:

1500

(1-1540)

User Name:

er@contactenergy.co.nz

Password:

●●●●●●●●●●●●

Enable LCP Detection:

☐

Binding Options:

☐ LAN1 ☐ LAN2 ☐ LAN3 ☐ LAN4
☐ SSID1 ☐ SSID2 ☐ SSID3 ☐ SSID4 ☐ SSID5 ☐ SSID6 ☐ SSID7 ☐ SSID8

Link Information

VPI/VCI:

0/11

*(VPI(0-255)/VCI(32-65535))

Link Mode:

EoA

Service Type:

UBR without PCR

Encapsulation Mode:

VCMUX

IPv4 Information

IP Acquisition Mode:

☐ Static ☐ DHCP ☒ PPPoE

Enable NAT:

☒

NAT type:

Full cone NAT

Dialing Method:

Automatic

Apply

Cancel