
- 1. Connect to the modem via Wire or Wireless
- 2. Open a browser (Chrome, Firefox, Safari, etc.) and enter 192.168.0.1 in the address bar
- 3. Enter admin as both the Username and the Password
- 4. Click Settings up the top and change My Internet connection is to Dynamic IP and click Save

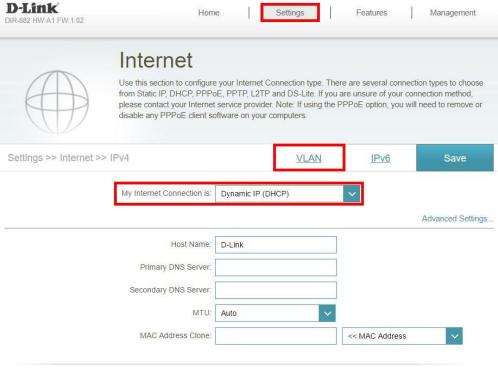

COPYRIGHT @ 2016 D-Link

- 5. Click VLAN
- 6. Enable Status and Priority ID
- 7. Match the settings below, then click Save

